



- ★ Please remove any ADSL USB Modem Driver or dial-up software and disable the firewall. As they may cause connection problem.
- ★ This quick installation is meant to help you to install the product quickly and easily. For further information, please refer to the User Manual

ADD-NWAR3670 Quick Installation Guide

Package Contents

- 1 x Wireless Modem Router
- 1 x Power Supply

- 1 x CD-ROM
- 1 x Quick Installation Guide

- 1 x Ethernet (RJ45) Cable - 1 x Telphone (RJ11) Cable




LED	Color	Status	Description
ADSL		On	The ADSL Line is established.
	0	Slow Blinks	No DISLAM's signal is being detected.
	Green	Fast Blinks	The ADSL Line is training.
		Off	The device is powered off.
		0.	PPP dial-up is successful or the IP address has been
	Crear	On	assigned by DHCP.
Internet	Green	Slow Blinks	The PPP or DHCP negotiation is in progress.
		Fast Blinks	Data is being transmitted or received on the Internet.
	Red	On	The authentication is failed.
		Off	The LAN connection is not established.
LAN	Croon	Blinks	Data is being transmitted or received through the LAN
4/3/2/1	Green	DIINKS	interface.
		On	The LAN connection is normal.
		On	The WLAN connection is established.
WLAN	Green	Blinks	Data is being transmitted or received though the WiFi
VVLAN	Green	DIIIIKS	interface.
		Off	The WLAN connection is not established.
		On	After the registration is successful, the WPS indicator is on for 5 minutes.
WPS	Green	Blinks	 If the WPS indicator is on for 0.2 second and then off for 0.1 second, the WPS button is pressed and a network card is registering. If the WPS indicator blinks once every 0.1 second, the registration fails. If the WPS indicator keeps blinking for five times, once every 0.1 second, and then is off for 0.5 second, two or more wireless network cards are registering at the same time.
		Off	WPS negotiation is not enabled on the device.
D	0	Off	The device is powered off.
Power	Green	On	The power is on and the initialization is normal.
		Off	No USB signal is detected.
USB	Green	Blinks	The user data is passing through USB port.
		On	The USB interface is ready to work.

Before You Start

Proper placement of your Gateway is important to improve your network performance. The figure below is a rough overview of the connection. Especially, in order to ensure the best performance of your wireless network, keep the following tips in mind to choose the location of your ADDON Gateway:


- Place the Gateway on a flat, stable surface.
- Keep the device clear from metal obstructions and away from direct sunlight.
- Keep the Gateway away from transformers, heavy-duty motors, fluorescent light, microwave ovens, refrigerators and other industrial equipments to prevent signal loss.
- Do NOT place objects or components on top of the Gateway.
- Locate the Gateway in a central area as possible to provide better coverage for all wireless clients.
- Connect the Power adapter to the receptor at the back panel of the ADD-NWAR3670 and plug the other end of
- the power adapter to the wall outlet or power strip. The PWR LED will turn ON to indicate proper operation.
- Insert an Ethernet cable to LAN port 1 on the back panel of the ADD-NWAR3670 and an available Ethernet port on the network adapter in the computer you will use to configure the ADD-NWAR3670. The LED light for LAN Port 1 will illuminate to indicate proper connection.

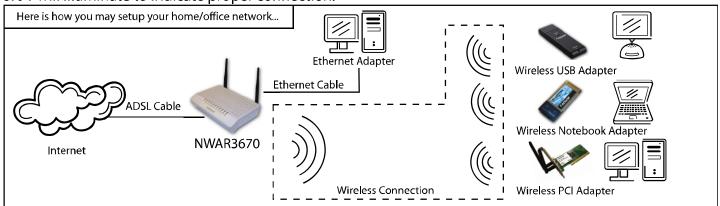

Warning: Only use the power adapter is provided from this package, use other power adapter may cause hardware damage

1. Hardware Connection

Rear panel:

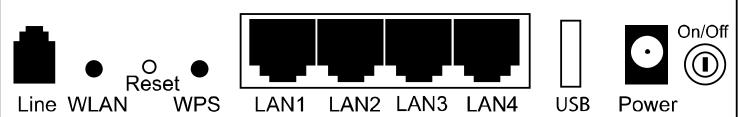

Interface	Description
Line	RJ-11 port: Connect the Modem to ADSL connector or splitter by telephone line.
WLAN	Enable or disable the WLAN. Press the button to enable WLAN.
Reset	To restore the factory default, keep the device powered on and push a long needle into the hole. Press down the button and then release.
WPS	Enable or disable the WPS. Press the button to enable WPS.
LAN1/2/3/4	RJ-45 port: Connect the Modem to a PC or other network device by network cable.
USB	USB host port, connect to another USB device to supply some value-added application.
Power	Power supplied port, plug in for power adapter that the power input is 12V DC, 1 A.
\bigcirc	Power switch.

Physical Connection

- Connect the ADSL cable from BT filter to the Line port at the back of the router. 1.
- 2. Connect the Ethernet cable from the Ethernet port on the router to the Ethernet port on the PC.
- 3. Plug the power cable to the router and turn on the power for the router.

PC Configuration

Windows 7

- Click "start" -> "Control Panel"->"Network and Sharing Center"->Change adapter settings 1.
- 2. Right click on "Local Area Connection", choose "Properties"
- Select "Internet Protocol Version 4 (TCP/IPv4)", and click "Properties", as shown in fig.1 3.
- Select "Obtain an IP address automatically" and "Obtain DNS server address automatically", click "OK" to save 4. the settings.

Internet Explorer Configuration

Windows 7

- Click "start"->"control panel"->"Internet Options", as shown in fig 3. 1.
- 2. Click tab "Connections", select "Never dial a connection"


🖗 Local Area Connection Properties	Internet Protocol Version 4 (TCP/IPv4) Properties	Internet Properties
Networking Sharing	General Alternate Configuration	General Security Privacy Content Connections Programs Advanced
Connect using:	You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.	To set up an Internet connection, click Setup Dial-up and Virtual Private Network settings
Configure This connection uses the following items:	Detain an IP address automatically O Use the following IP address:	Add
Client for Microsoft Networks Client for Micro NDIS 6.0 Filter Driver Q QoS Packet Scheduler	IP address:	Add VEN
Get and Printer Sharing for Microsoft Networks Get Internet Protocol Version 6 (TCP//Pv6) def Internet Protocol Version 4 (TCP//Pv4)	Default gateway:	Choose Settings if you need to configure a proxy Settings server for a connection.
Arternet Protoci Version 4 (10-2/17-4) Articlayer Topology Discovery Mapper I/O Driver Articlayer Topology Discovery Responder	Obtain DNS server address automatically Use the following DNS server addresses:	Dial whenever a network connection is not present Always dial my default connection Current None Set default
Install Properties Description	Preferred DNS server:	Local Area Network (LAN) settings
Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.	Validate settings upon exit Advanced	Choose Settings above for dial-up settings.
OK Cancel	OK Cancel	OK Cancel Apply
Fig.1	Fig.2	Fig.3

2. **ADSL2+** Router Configuration


Step 1: Open Internet Explorer, enter NWAR3670 default IP address <u>http://192.168.1.1</u> in the address bar and press Enter.



Step 2: Enter "admin" as the password, if the login page is loaded. Click "login" to login to the web management site.

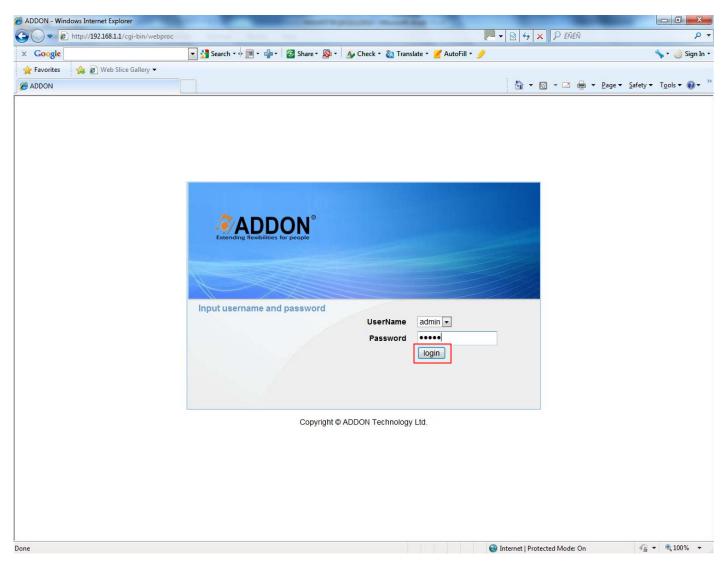

Step 3: The homepage of the router will be shown as below, and then click "Setup Wizard" to continue.

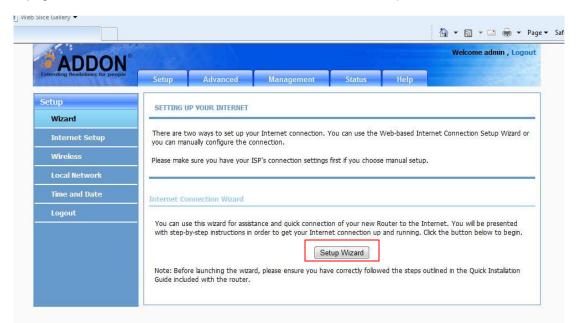

Step 4: Click on "Next" to continue.

Extending flexibilities for people	Setup	Advanced	Management	Status	Help	
Setup	WELCOME	TO SETUP WIZARD)			
Wizard	-					
Internet Setup	This wizard	will guide you throug	h a step-by-step process	to configure your	new router and conne	ect to the Internet.
Wireless			Step 1	L : Set Time and D	Date	
Local Network			Step 2	2 : Setup Internet	Connection	
				Configure Wire		
Time and Date			Step 4	: Completed and	Quit	
Logout			Nex	tCancel		

Step 5: Click on "Next" to continue.

stending flexibilities for people	Setup	Advanced	Management	Status	Help	
tup	STEP 1: S	ET TIME AND DATE				
Wizard						
Internet Setup	The Time Configuration option allows you to configure, update, and maintain the correct time on the internal system clock From this section you can set the time zone that you are in and set the NTP (Network Time Protocol) Server. Daylight					
Wireless	Saving can a	also be configured to autor	matically adjust the	e time when need	ed.	
Local Network						
Time and Date	TIME SETTI	NG				
Logout			Automatical	y synchronize wi	th Internet time server	rs
	-#	1st NTP time serve	er: 192.168.2.10			
		2th NTP time serve	er: 192.168.2.10	0		
	TIME CONFI	IGURATION				
		Time Zon	e: (GMT) Greenw	hich Mean Time: Dub	in, <mark>Li</mark> sbon, London; Casablan	ca 💌
			📄 Enable Daylig	ht Saving		
		Daylight Saving Star	t: 2000 Year	04 Mon 01	Day 02 Hour 00	Min 00 Sec
		Daylight Saving En	d: 2000 Year	09 Mon 01	Day 02 Hour 00	Min 00 Sec

Step 6: Enter your ISP's username and password, and then click on "Next" to continue.

Extending flexibilities for people	Setup	Advanced	Management	Status	Help	
Setup Wizard	STEP 2: S	ETUP INTERNET CO	NNECTION			
Internet Setup	Please selec	t your ISP (Internet	Service Provider) from the	e list below.		
Wireless		_	Protocol : PR	10 B		
Local Network		Ę	ncapsulation Mode: V VPI: 0	Mux ►	(0-255)	
Time and Date			VCI : 38	3	(32-65535)	
Logout		er your Username and	d Password as provided by king note of upper and lor Username : Password : Confirm Password : Back			e

Step 7: To setup your wireless security, select security level and enter your network key in the box. Then click on "Next" to continue.

		curity Level	Best
O None	© WEP	WPA-PSK	WPA2-PSK
Security Mode:	WPA2-PSK if your wireless adapters sup	port WPA2-PSK.	
w, please enter your wir	eless security key :		
			1
	WPA2 Pre-Shared Key		and a second
	(8-63 characters, such as a	z, A~Z, or 0~9, i.e. '%Fortro	ess123&')

Step 8: Click on "Apply" to save the settings.

Wizard						
Internet Setup	Setup complete. Click "Back" to review or modify settings.					
Wireless	If your Internet connection does not work, you can try the instead if you have your Internet connection details as prov	e Setup Wizard again with alternative settings or use Manual Setu vided by your ISP.				
Local Network						
rime and Date	SETUP SUMMARY					
Logout	Below is a detailed summary of your settings. Please print you can configure the correct settings on your wireless cli	this page out, or write the information on a piece of paper, so ent adapters.				
	Time Settings :	1				
	NTP Server 1 :	192.168.2.10				
	NTP Server 2 :	192.168.2.100				
	Time Zone :	GMT				
	Daylight Saving Time :	0				
	VPI / VCI :	0/38				
	VPI / VCI :	0/38				
	VPI / VCI : Protocol :	0/38 PPPoA				
	VPI / VCI : Protocol : Connection Type :	0/38 PPPoA VCMUX				
	VPI / VCI : Protocol : Connection Type : Username :	0/38 PPPoA VCMUX asd				
	VPI / VCI : Protocol : Connection Type : Username : Password :	0/38 PPPoA VCMUX asd ***				
	VPI / VCI : Protocol : Connection Type : Username : Password : Wireless Network Name (SSID) :	0/38 PPPoA VCMUX asd *** ADD-NWAR3670				
	VPI / VCI : Protocol : Connection Type : Username : Password : Wireless Network Name (SSID) : Visibility Status :	0/38 PPPoA VCMUX asd *** ADD-NWAR3670 1				

Step 9: To check connection, click on "Status", you will see status show "Connected" and WAN IP Address.

fo Clients						
Clients						
	This informatio	n reflects the current status of you	ur WAN connectio	n.		
nts						
	SYSTEM INFO	IN USB IN 3G)				
	Modem Nam	ie :	IM-	300NX		
	Time and Da	ite :	200	0-01-01 20:40	0:20	
	Construction and the second	Firmware Version : 1.0.0				
	INTERNET INFO					
)	INTERNET INFO	,	0_0_Internet 💌	inected		
	INTERNET INFO	nnection Status : pppoa_0_38_ nnection Status:	0_0_Internet 💌			
<u></u>	INTERNET INFO	nnection Status : pppoa_0_38_ nnection Status: eway:	0_0_Internet 💌 Cor 81.	inected		
	INTERNET INFO Internet Cor Internet Co Default Gate	nnection Status : pppoa_0_38_ nnection Status: eway: ns Server:	0_0_Internet - Cor 81. 62.	inected 139.128.1		
	INTERNET INFO	nnection Status : pppoa_0_38_ nnection Status: eway: ns Server:	0_0_Internet - Cor 81. 62.	inected 139.128.1 6.40.178 .72.9.34		

Note: For accessing USB storage uing FTP over Internet, you must go to "Management" -> "Access Controls" -> "Services" to tick "WAN" for FTP and then click "Apply".

3. Connect your wireless PC/laptop to NWAR3670

- For Windows 7
 - 1. Click on "connection" in the system tray, highlight your wireless network and click on "Connect".



2. Enter your network key when the box is shown below, and click on "OK".

😰 Connect to a Netwo	rk	×				
Type the network	Type the network security key					
Security key:	•••••					
	Hide characters					
	You can also connect by pushing the putton on the router.					
	ОК	Cancel				

For any further information on ADDON NWAR3670, please refer to your user's manual in the CD.

Note: To maximize your wireless connection speed in 11n mode, we recommend the customers to set WPA2-PSK with AES encryption for your wireless connection.